CATERPILLAR

SERVICE MANUAL

236B3 SKID STEER LOADER

Printed by
Heavy Equipment Manuals
v2.20

Printed in U.S.A

Heavy Equipment Manuals

This is the sample of the Manual
click on
the download link for complete manual

DOWNLOAD LINK

For some reason if link does not work download this pdf and then click

Disassembly and Assembly 2
Schematic 889
Specifications 1176
Systems Operation 1366
Torque Specifications 2286

KENR6941-04 C3.4 Engines for Caterpillar Built Machines 2
UENR0248-03 247B3 and 257B3 Multi Terrain Loaders 321
UENR0251-07 259B3 Compact Track Loader 439
UENR0252-02 259B3 Compact Track Loader 625
UENR3262-00 Seal Installation 825

Alternator - Remove and Install 4
Balancer - Assemble 8
Balancer - Disassemble 12
Balancer - Install 16
Balancer - Remove 20
Bearing Clearance - Check 23
Camshaft - Remove and Install 26
Camshaft Gear - Remove and Install 31
Connecting Rod Bearings - Install - Connecting rods in position 34
Connecting Rod Bearings - Remove - Connecting rods in position 37
Coolant Temperature Sensor - Remove and Install 39
Crankcase Breather - Remove and Install - Turbocharged Engines 42
Crankshaft - Install 45
Crankshaft - Remove 54
Crankshaft Front Seal - Remove and Install 59
Crankshaft Gear - Remove and Install 63
Crankshaft Main Bearings - Remove and Install - Crankshaft in position 66
Crankshaft Pulley - Remove and Install 78
Crankshaft Rear Seal - Remove and Install 83
Crankshaft Wear Sleeve (Rear) - Remove and Install 88
Cylinder Head - Install 92
Cylinder Head - Remove 98
Electric Starting Motor - Remove and Install 104
Engine Oil Bypass Valve - Remove and Install 107
Engine Oil Cooler - Install 110
Engine Oil Cooler - Remove 114
Engine Oil Filter Base - Remove and Install 118
Engine Oil Pan - Remove and Install 121
Engine Oil Pressure Sensor - Remove and Install 129

Engine Oil Pump - Install 132
Engine Oil Pump - Remove 136
Engine Oil Relief Valve - Remove and Install 138
Exhaust Manifold - Remove and Install 141
Fan - Remove and Install 144
Flywheel - Install 147
Flywheel - Remove 151
Flywheel Housing - Remove and Install 154
Front Cover - Remove and Install 159
Front Plate - Install 162
Front Plate - Remove 165
Fuel Injection Lines - Remove and Install - Naturally Aspirated Engines 168
Fuel Injection Lines - Remove and Install - Turbocharged Engines 175
Fuel Injection Pump - Install - Fuel Injection Pumps With a Water Heated Cold Start Device 182
Fuel Injection Pump - Install 187
Fuel Injection Pump - Remove - Fuel Injection Pumps With a Water Heated Cold Start Device 192
Fuel Injection Pump - Remove 198
Fuel Injector - Remove and Install - Naturally Aspirated Engines 203
Fuel Injector - Remove and Install - Turbocharged Engines 206
Fuel Priming Pump and Fuel Filter Base - Remove and Install 209
Glow Plugs - Remove and Install 212
Housing (Front) - Remove and Install 216
Idler Gear - Remove and Install 220
Inlet and Exhaust Valve Guides - Remove and Install 226
Inlet and Exhaust Valve Seat Inserts - Remove and Install 230
Inlet and Exhaust Valve Springs - Remove and Install - Alternative Method 233

Inlet and Exhaust Valve Springs - Remove and Install 239
Inlet and Exhaust Valves - Remove and Install 245
Inlet Manifold - Remove and Install 254
Lifter Group - Remove and Install 258
Pistons and Connecting Rods - Assemble 262
Pistons and Connecting Rods - Disassemble 270
Pistons and Connecting Rods - Install 277
Pistons and Connecting Rods - Remove 281
Rocker Shaft - Assemble 283
Rocker Shaft - Disassemble 286
Rocker Shaft and Pushrod - Install 289
Rocker Shaft and Pushrod - Remove 292
Turbocharger - Install 295
Turbocharger - Remove 299
Valve Mechanism Cover - Remove and Install 303
V-Belts - Remove and Install 308
Water Pump - Remove and Install 311
Water Temperature Regulator Housing - Remove and Install 316

Product: SKID STEER LOADER
Model: 236B3 SKID STEER LOADER A9H
Configuration: 236B3 Skid Steer Loader A9H00001-UP (MACHINE) POWERED BY C3.4 IND Engine

Disassembly and Assembly
C3.4 Engines for Caterpillar Built Machines
Media Number -KENR6941-04 **Publication Date -01/03/2012** **Date Updated -01/03/2012**

i02639317

Alternator - Remove and Install

SMCS - 1405-010

Removal Procedure

Start By:

A. Remove the V-Belt. Refer to Disassembly and Assembly, "V-Belts - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

1. Turn the battery disconnect switch to the OFF position.
2. Make temporary identification marks on the connections of the harness assembly.

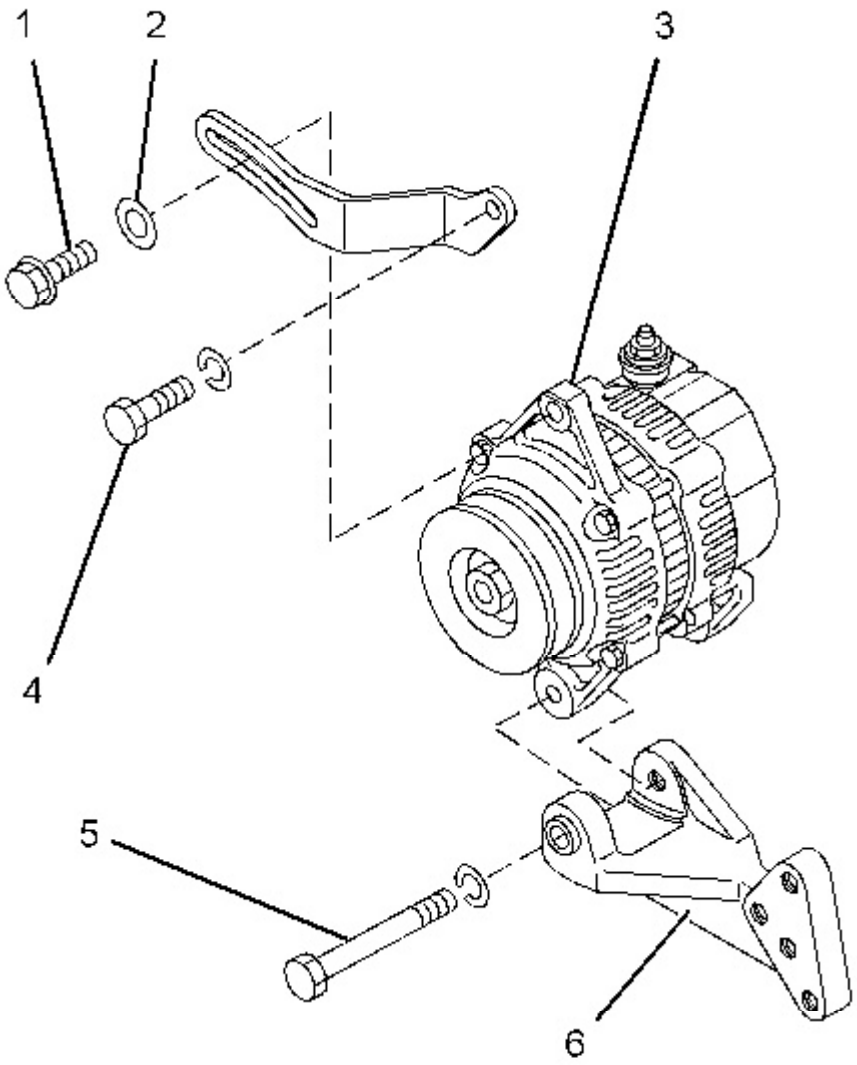

Illustration 1 g01343570

Typical Example

3. Disconnect the harness assembly from alternator (3) .
4. Loosen bolt (4). Remove bolt (1) and washer (2) from alternator (3) .
5. Remove bolt (5) from alternator (3). Remove the alternator from alternator bracket (6) .

Installation Procedure

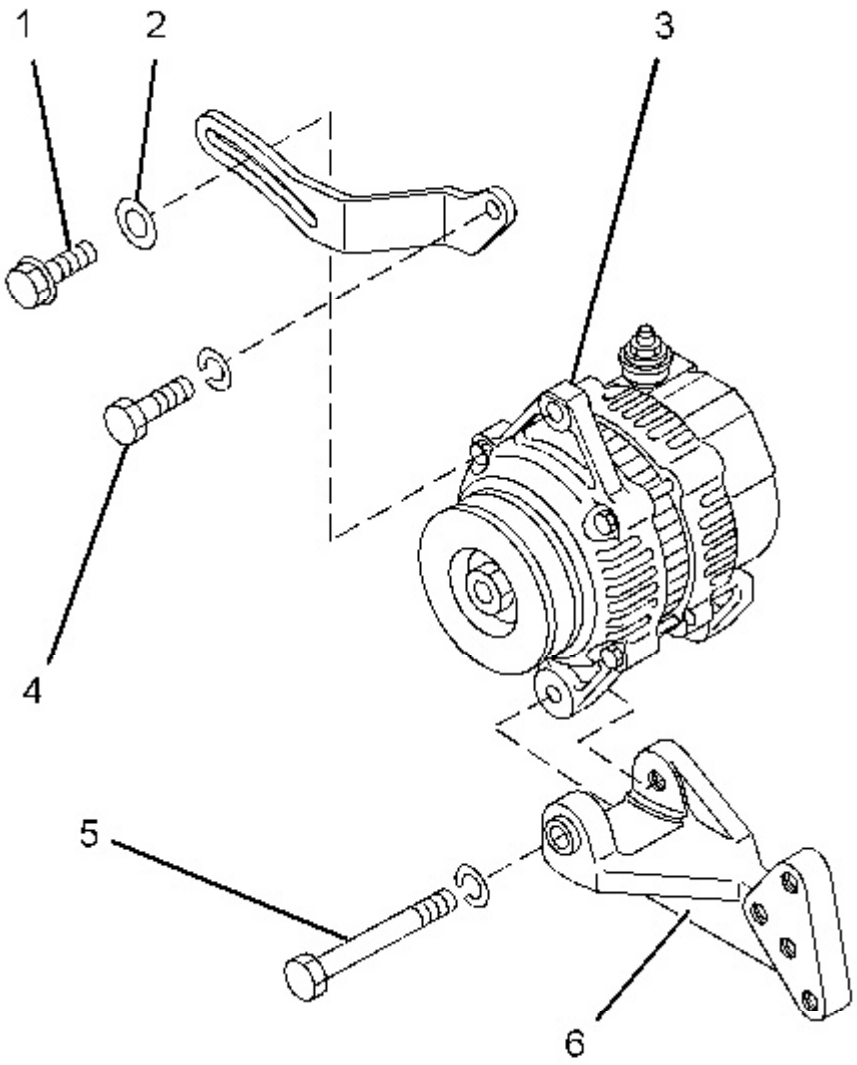

Illustration 2 g01343570

Typical example

1. Position alternator (3) on bracket (6) and install bolt (5) finger tight.
2. Install bolt (1) and washer (2) finger tight.
3. Install the V-belt. Refer to Disassembly and assembly, "V-belts - Remove and Install" for the correct procedure.
4. Tighten bolts (1) and (4) to a torque of 11 N·m (97 lb in). Tighten bolt (5) to a torque of 35 N·m (26 lb ft).
5. Connect the harness assembly to alternator (3) .
6. Turn the battery disconnect switch to the ON position.

Copyright 1993 - 2020 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Tue Feb 18 00:00:07 UTC+0530 2020

Product: SKID STEER LOADER
Model: 236B3 SKID STEER LOADER A9H
Configuration: 236B3 Skid Steer Loader A9H00001-UP (MACHINE) POWERED BY C3.4 IND Engine

Disassembly and Assembly
C3.4 Engines for Caterpillar Built Machines
Media Number -KENR6941-04 **Publication Date -01/03/2012** **Date Updated -01/03/2012**

i02744463

Balancer - Assemble

SMCS - 1220-016

Assembly Procedure

Table 1

Required Tools			
Tool	**Part Number**	**Part Description**	**Qty**
B	1P-1857	Retaining Ring Pliers	1
C	1P-0510	Driver Gp	1
D	9S-3263	Thread Lock Compound	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

1. Ensure that all components of the balancer are clean and free from damage.

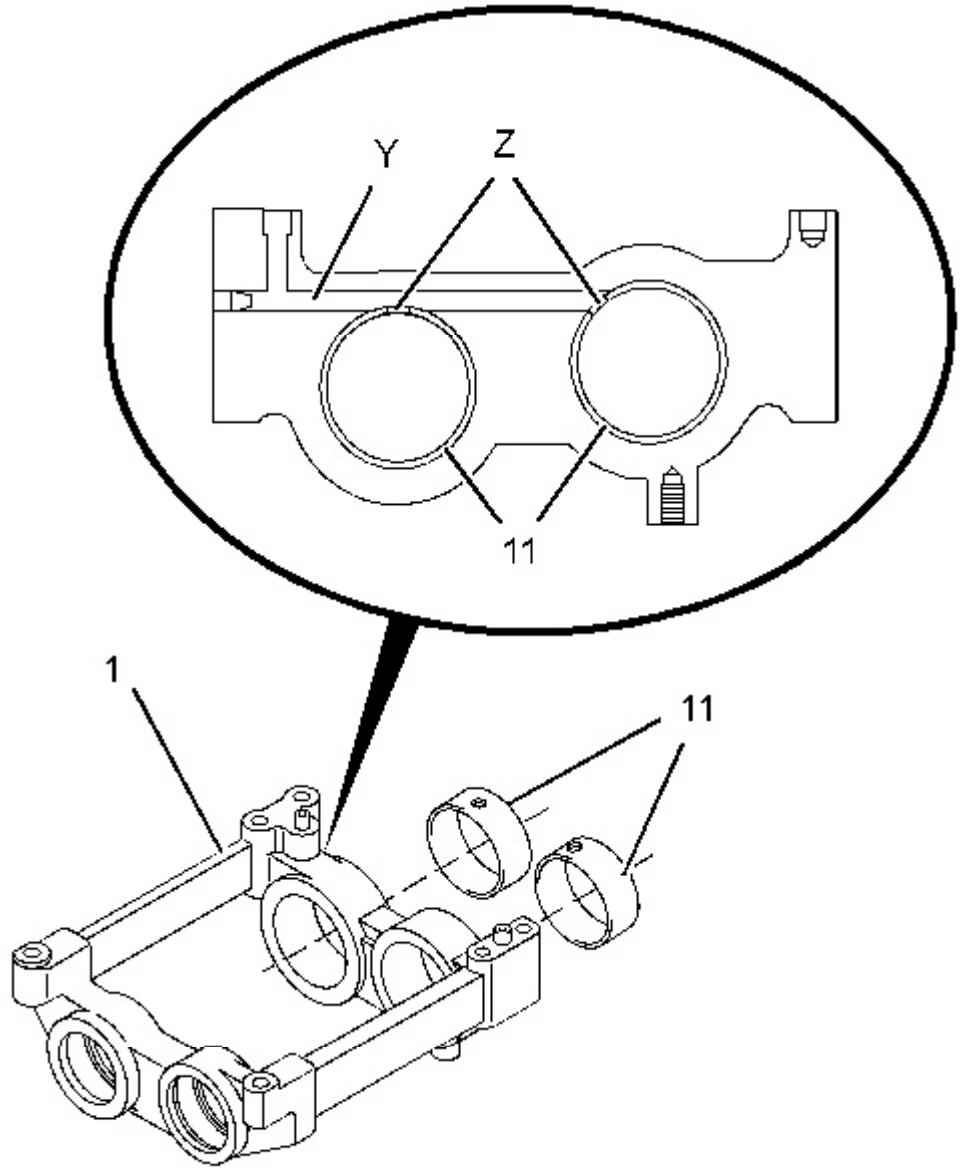

Illustration 1 g01344574

2. If new bushing (11) is installed to the balancer, follow Steps 2.a and 2.b.
   a. Align oil holes (Z) in bushing (11) to drilling (Y) in balancer (1) .
   b. Use Tooling (C) to install bushing (11) to balancer (1). Ensure that the oil holes (Z) are correctly aligned to drilling (Y) .

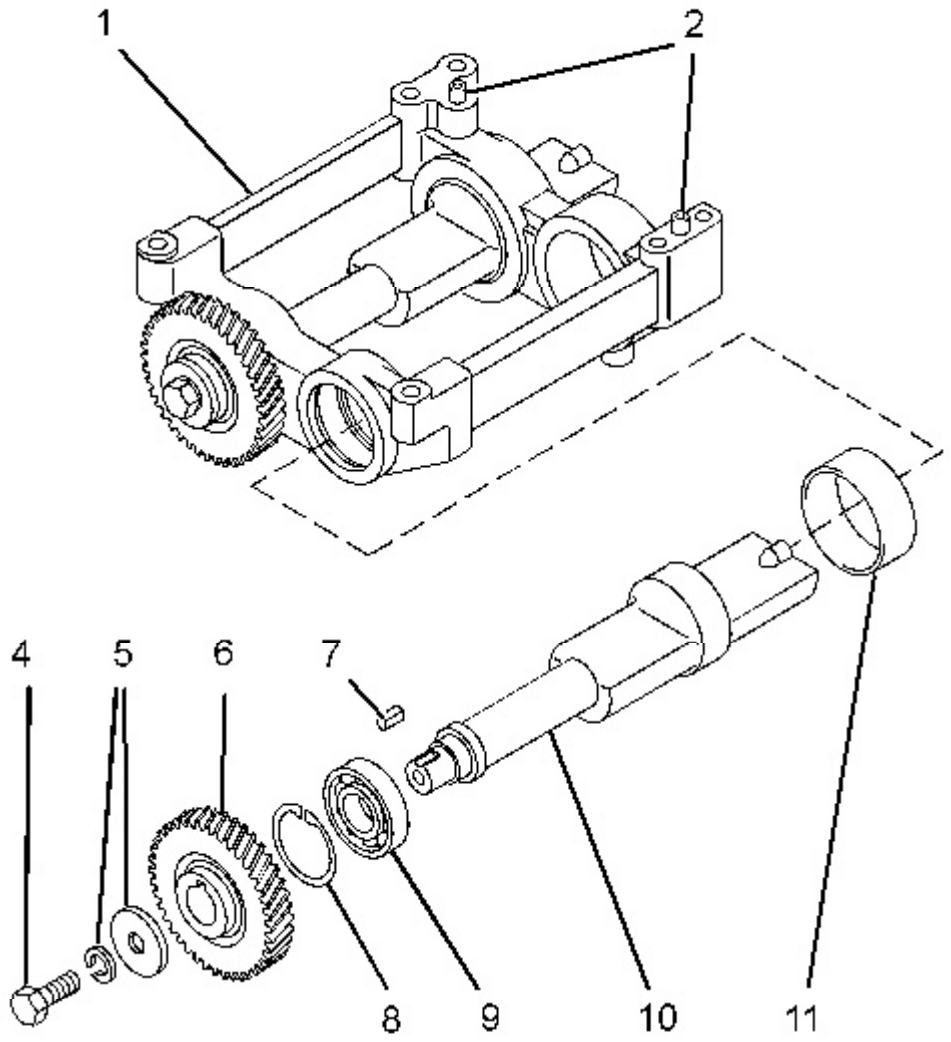

Illustration 2 g01344515

3. Use Tooling (C) in order to press bearings (9) into balancer (1) .

   Note: Do not press on the inner race of the bearing as this could result in damage to the bearing.

4. Use Tooling (B) to install retaining rings (8) .

   Note: Ensure that the retaining rings are fully located into the grooves in the balancer.

5. Lubricate balancer shafts (10) and bushing (11) with clean engine oil. Carefully install the balancer shafts to balancer (1) .

6. Install keys (7) .

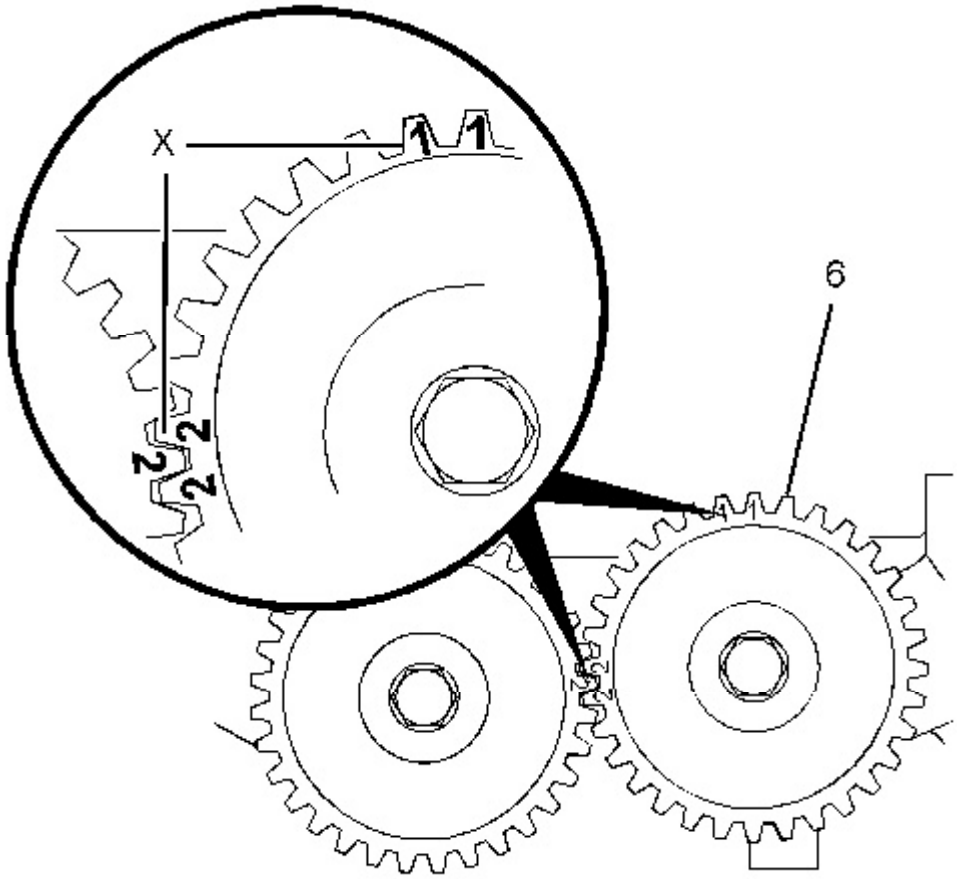

Illustration 3 g01344665

Timing marks

7. Align gears (6) with keys (7) and install the gears to balancer shafts (10). Ensure that the gears are installed in the correct position.

   Note: The gears have different Markings (X). The right hand gear is marked 1,1 and 2,2. The left hand gear is marked 2. Refer to Illustration 3.

8. Apply Tooling (D) to the threads of bolts (4). Install bolts (4) and washers (5). Tighten the bolts to a torque of 33 N·m (24 lb ft).

Copyright 1993 - 2020 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Mon Feb 17 23:55:34 UTC+0530 2020

This is the sample of the sample click on
the download link for complete manual

DOWNLOAD LINK

For some reason if link does not work download this pdf and then click

Product: SKID STEER LOADER
Model: 236B3 SKID STEER LOADER A9H
Configuration: 236B3 Skid Steer Loader A9H00001-UP (MACHINE) POWERED BY C3.4 IND Engine

Disassembly and Assembly
C3.4 Engines for Caterpillar Built Machines
Media Number -KENR6941-04 **Publication Date -01/03/2012** **Date Updated -01/03/2012**

i02744461

Balancer - Disassemble

SMCS - 1220-015

Disassembly Procedure

Table 1

Required Tools			
Tool	**Part Number**	**Part Description**	**Qty**
A	1P-2320	Combination Puller	1
B	1P-1857	Retaining Ring Pliers	1
C	1P-0510	Driver Gp	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

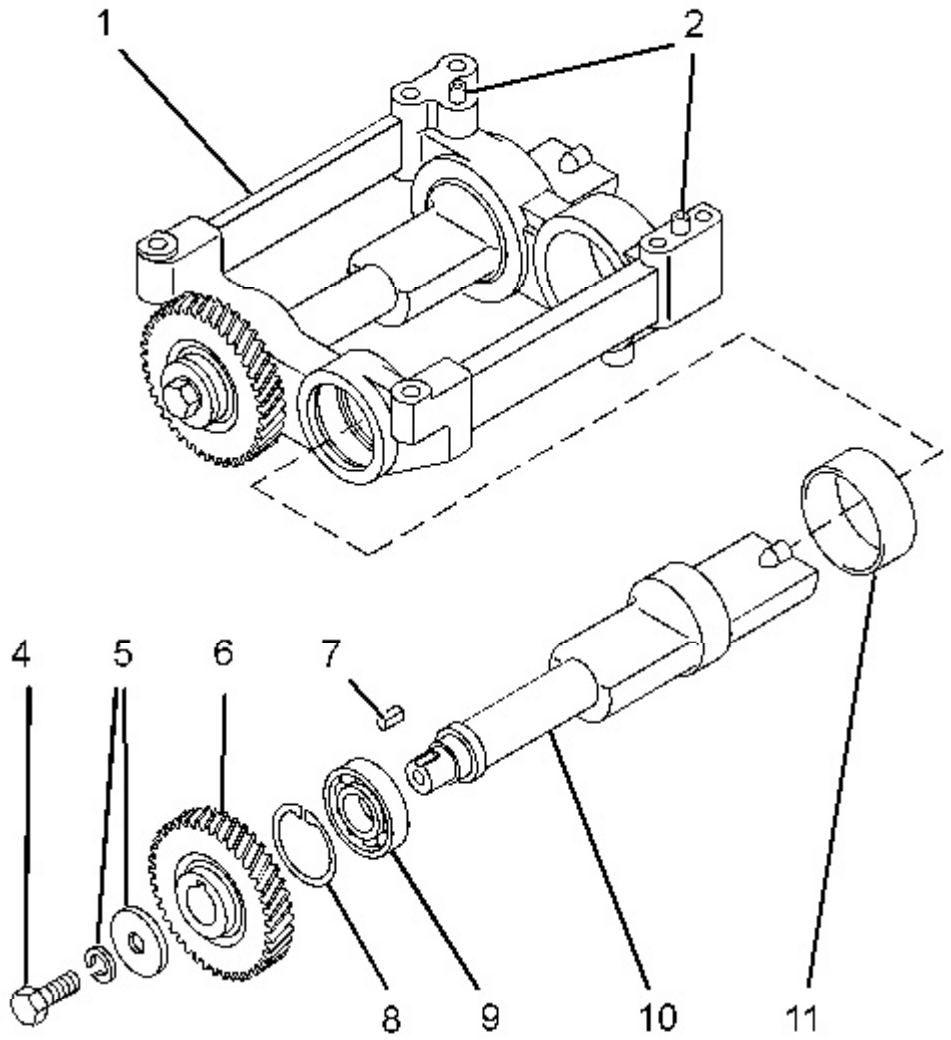

Illustration 1 g01344515

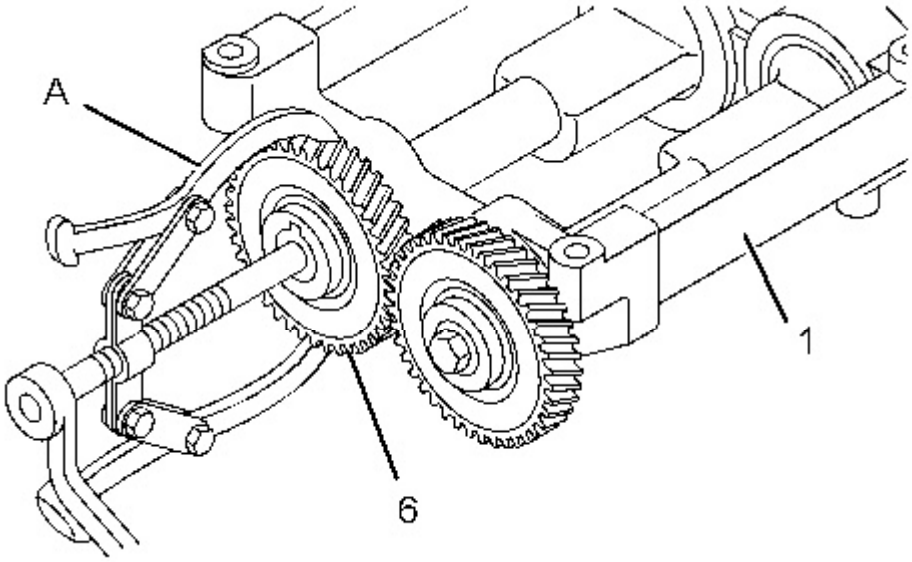

Illustration 2 g01344528

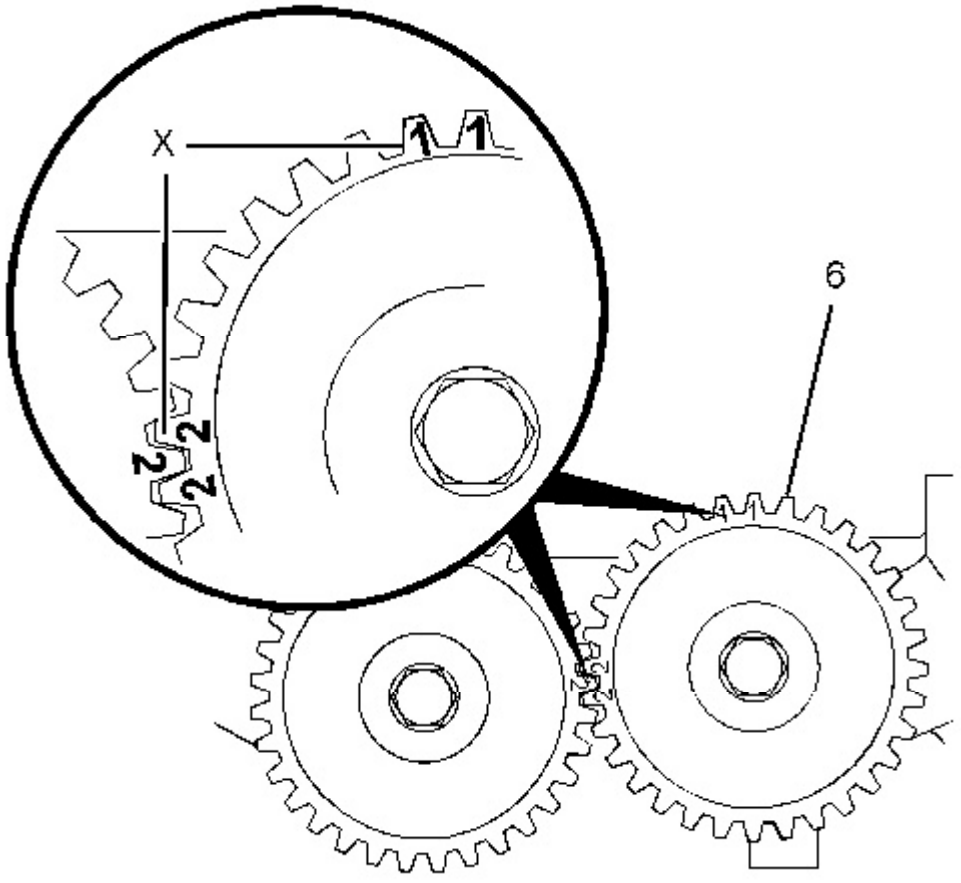

Illustration 3 g01344665

Timing marks

1. Remove bolts (4) and washers (5). Use Tooling (A) in order to remove gears (6). Ensure that balancer shaft (10) is protected from damage.

   Note: Gears (6) have different Markings (X). Refer to Illustration 3. Identify the position of the gears for installation.

2. Remove keys (7). Use Tooling (B) in order to remove retaining rings (8) .

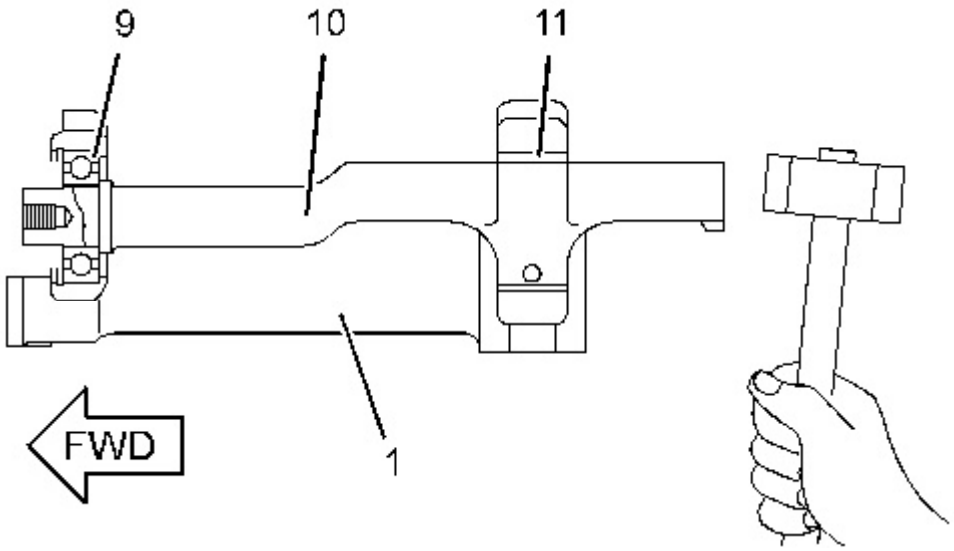

Illustration 4 g01344533

3. Carefully tap the assembly of bearing (9) and balancer shaft (10) forward until the shaft is clear of bushing (11). Refer to Illustration 4.

4. Use Tooling (A) in order to remove bearing (9) from balancer shaft (10) .

   Note: Ensure that the balancer shaft is protected from damage.

5. Slide balancer shaft (10) back through bushing (11) until the shaft is clear of the balancer.

6. If necessary, use Tooling (C) in order to remove bushing (11) from balancer (1) .

Copyright 1993 - 2020 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Mon Feb 17 23:55:21 UTC+0530 2020

Product: SKID STEER LOADER
Model: 236B3 SKID STEER LOADER A9H
Configuration: 236B3 Skid Steer Loader A9H00001-UP (MACHINE) POWERED BY C3.4 IND Engine

Disassembly and Assembly
C3.4 Engines for Caterpillar Built Machines
Media Number -KENR6941-04 **Publication Date -01/03/2012** **Date Updated -01/03/2012**

i02639299

Balancer - Install

SMCS - 1220-012

Installation Procedure

Table 1

Required Tools			
Tool	**Part Number**	**Part Description**	**Qty**
F	9U-7324	Indicator Bracket	1
	7H-1942	Dial Indicator	1
	3S-3268	Indicator Contact Point	1
	7H-1940	Universal Attachment	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

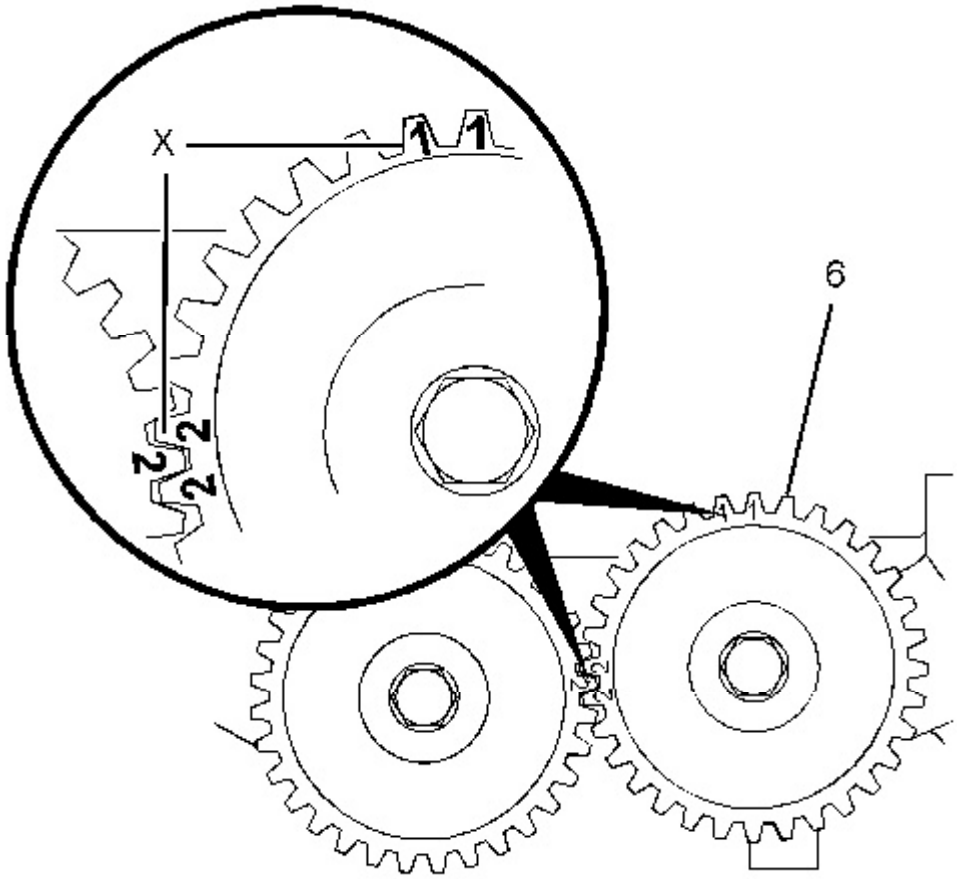

Illustration 1 g01344665

Timing marks

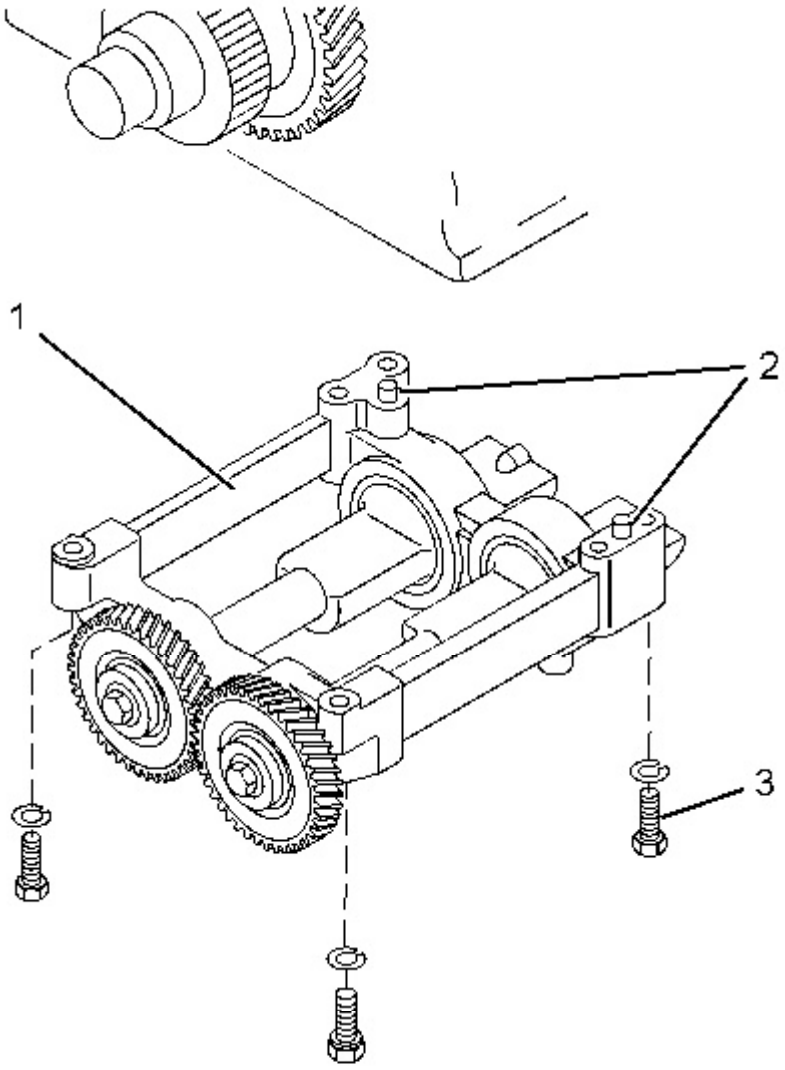

Illustration 2 g01344983

1. Ensure that dowels (2) are seated in balancer (1). Ensure that marks 2,2 and 2 on gears (6) are aligned. Refer to Illustration 1.

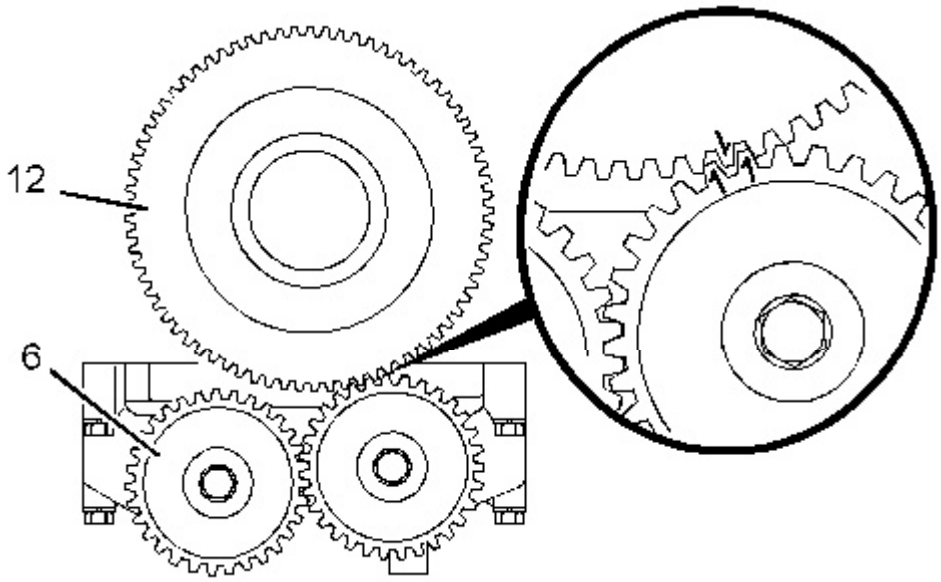

Illustration 3 g01344971

Alignment of the timing marks

2. Align dowels (2) with the holes in the cylinder block. Align mark 1,1 on gear (6) to mark 1 on crankshaft gear (12). Refer to Illustration 3. Position balancer (1) on the engine. The balancer weighs approximately 23 kg (51 lb).
3. Install bolts (3). Tighten the bolts to a torque of 30 N·m (22 lb ft).
4. Use Tooling (F) in order to check the backlash between gears (6). Refer to Specifications, "Gear Group (Front)".
5. Use Tooling (F) in order to check the backlash between gears (6) and (12). Refer to Specifications, "Gear Group - Front" for further information.

End By: Install the engine oil pan. Refer to Disassembly and Assembly, " Engine Oil Pan - Remove and Install".

Copyright 1993 - 2020 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Mon Feb 17 23:55:48 UTC+0530 2020

Product: SKID STEER LOADER
Model: 236B3 SKID STEER LOADER A9H
Configuration: 236B3 Skid Steer Loader A9H00001-UP (MACHINE) POWERED BY C3.4 IND Engine

Disassembly and Assembly
C3.4 Engines for Caterpillar Built Machines
Media Number -KENR6941-04 **Publication Date -01/03/2012** **Date Updated -01/03/2012**

i02639298

Balancer - Remove

SMCS - 1220-011

Removal Procedure

Start By:

A. Remove the engine oil pan and remove the oil strainer. Refer to Disassembly and Assembly, "Engine Oil Pan - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Dispose of all fluids according to local regulations and mandates.

---

1. Ensure that number one piston is at the top center position on the compression stroke. Refer to Systems Operation, Testing and Adjusting, "Finding Top Center Position for No. 1 Piston".

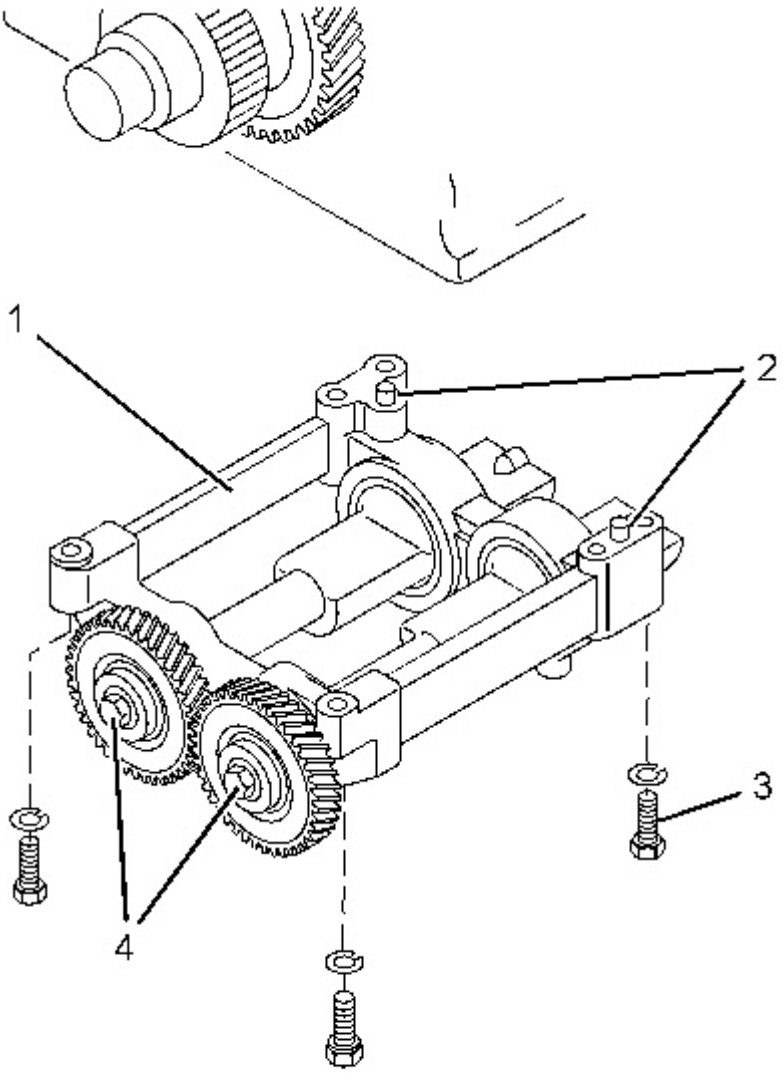

Illustration 1 g01344508

Note: If the balancer will be disassembled, loosen bolts (4) before the balancer is removed from the engine.

2. Support the weight of the balancer. The balancer weighs approximately 23 kg (51 lb). Remove bolts (3) and remove balancer (1) from the engine.

3. Do not remove dowels (2) unless the dowels are damaged.

Copyright 1993 - 2020 Caterpillar Inc.
All Rights Reserved.
Mon Feb 17 23:55:03 UTC+0530 2020

Private Network For SIS Licensees.

Product: SKID STEER LOADER
Model: 236B3 SKID STEER LOADER A9H
Configuration: 236B3 Skid Steer Loader A9H00001-UP (MACHINE) POWERED BY C3.4 IND Engine

Disassembly and Assembly
C3.4 Engines for Caterpillar Built Machines
Media Number -KENR6941-04 **Publication Date -01/03/2012** **Date Updated -01/03/2012**

i05977048

Bearing Clearance - Check

SMCS - 1203-535; 1219-535

Measurement Procedure

Table 1

Required Tools			
Tool	**Part Number**	**Part Description**	**Qty**
A	198-9142	Plastic Gauge (Green) 0.025 to 0.076 mm (0.001 to 0.003 inch)	1
	198-9143	Plastic Gauge (Red) 0.051 to 0.152 mm (0.002 to 0.006 inch)	1
	198-9144	Plastic Gauge (Blue) 0.102 to 0.229 mm (0.004 to 0.009 inch)	1
	198-9145	Plastic Gauge (Yellow) 0.230 to 0.510 mm (0.009 to 0.020 inch)	1

Note: Plastic gauge may not be necessary when the engine is in the chassis.

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

Note: Cat does not recommend the checking of the actual bearing clearances particularly on small engines. This is because of the possibility of obtaining inaccurate results and the possibility of damaging the bearing or the journal surfaces. Each Cat engine bearing is quality checked for specific wall thickness.

Note: The measurements should be within specifications and the correct bearings should be used. If the crankshaft journals and the bores for the block and the rods were measured during disassembly, no further checks are necessary. However, if the technician still wants to measure the bearing clearances, Tooling (A) is an acceptable method. Tooling (A) is less accurate on journals with small diameters if clearances are less than 0.10 mm (0.004 inch).

NOTICE

Lead wire, shim stock or a dial bore gauge can damage the bearing surfaces.

The technician must be very careful to use Tooling (A) correctly. The following points must be remembered:

- Ensure that the backs of the bearings and the bores are clean and dry.
- Ensure that the bearing locking tabs are properly seated in the tab grooves.
- The crankshaft must be free of oil at the contact points of Tooling (A).

1. Put a piece of Tooling (A) on the crown of the bearing that is in the cap.

   Note: Do not allow Tooling (A) to extend over the edge of the bearing.

2. Use the correct torque-turn specifications in order to install the bearing cap. Do not use an impact wrench. Be careful not to dislodge the bearing when the cap is installed.

   Note: Do not turn the crankshaft when Tooling (A) is installed.

3. Carefully remove the cap, but do not remove Tooling (A). Measure the width of Tooling (A) while Tooling (A) is in the bearing cap or on the crankshaft journal. Refer to Illustration 1.

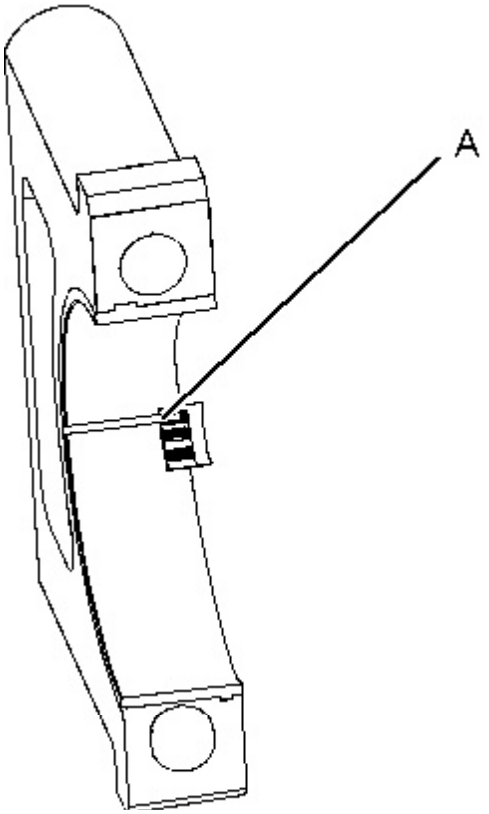

Illustration 1 g01152855

Typical Example

4. Remove all of Tooling (A) before you install the bearing cap.

   Note: When Tooling (A) is used, the readings can sometimes be unclear. For example, all parts of Tooling (A) are not the same width. Measure the major width in order to ensure that the parts are within the specification range. Refer to Specifications Manual, "Connecting Rod Bearing Journal" and Specifications Manual, "Main Bearing Journal" for the correct clearances.

Copyright 1993 - 2020 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Product: SKID STEER LOADER
Model: 236B3 SKID STEER LOADER A9H
Configuration: 236B3 Skid Steer Loader A9H00001-UP (MACHINE) POWERED BY C3.4 IND Engine

Disassembly and Assembly
C3.4 Engines for Caterpillar Built Machines
Media Number -KENR6941-04 **Publication Date -01/03/2012** **Date Updated -01/03/2012**

i02639294

Camshaft - Remove and Install

SMCS - 1210-010

Removal Procedure

Start By:

A. Remove the front housing. Refer to Disassembly and Assembly, "Housing (Front) - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

---

1. The engine should be mounted on a suitable stand and placed in the inverted position.
2. Rotate the crankshaft so that number one piston is at the top center position on the compression stroke. Refer to Systems Operation, Testing and Adjusting, "Finding Top Center Position for No.1 Piston".
3. Remove the rocker shaft and pushrods. Refer to Disassembly and Assembly, "Rocker Shaft and Pushrod - Remove".

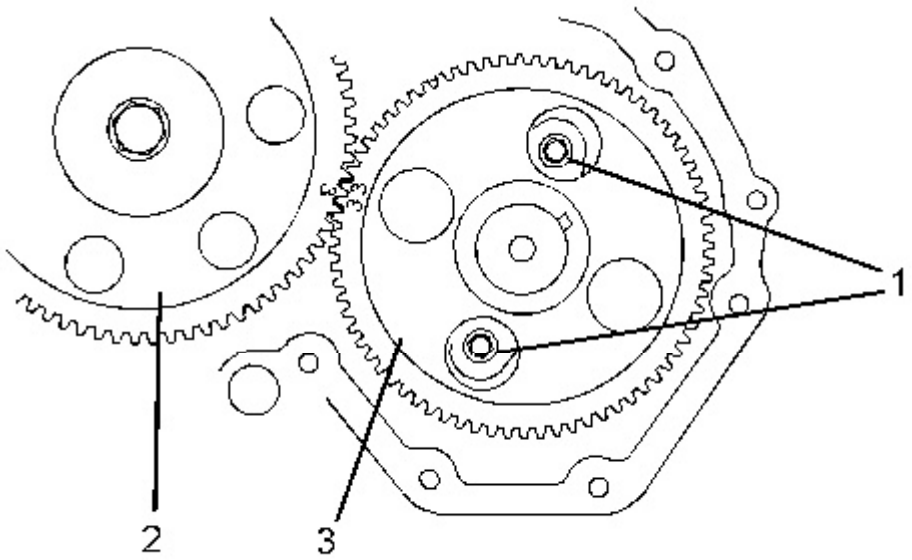

Illustration 1 g01349741

Typical example

4. Ensure that gears (2) and (3) are marked in order to show alignment. Refer to Illustration 1.

   Note: Identification will ensure that the camshaft can be installed in the original position.

5. Remove bolts (1) .

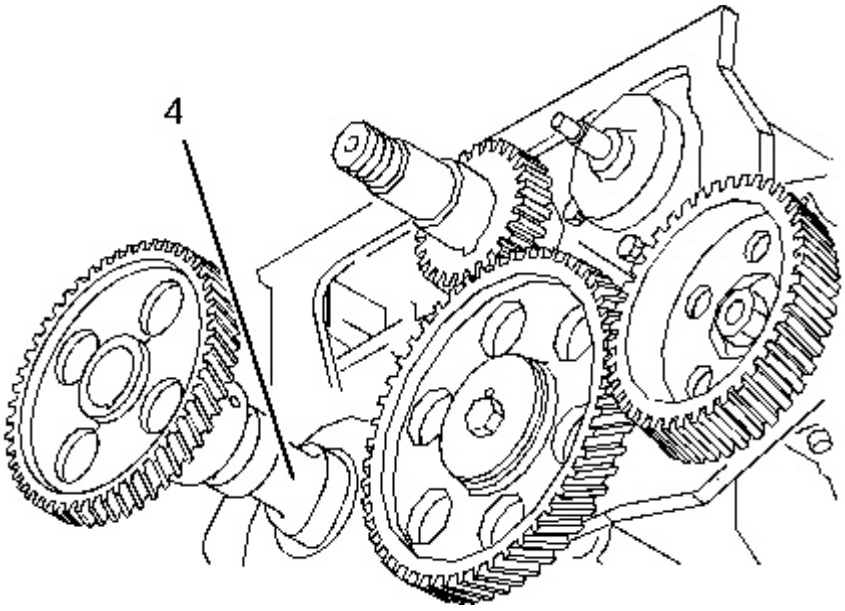

Illustration 2 g01350309

Typical example

NOTICE

Do not damage the lobes or the bearings when the camshaft is removed or installed.

6. Carefully remove camshaft assembly (4) from the cylinder block.

7. If necessary, remove the camshaft gear. Refer to Disassembly and Assembly, "Camshaft Gear.- Remove and Install".

Installation Procedure

Table 1

Required Tools			
Tool	**Part Number**	**Part Description**	**Qty**
A	9U-7324	Indicator Bracket	1
	7H-1942	Dial Indicator	1
	3S-3268	Indicator Contact Point	1
	7H-1940	Universal Attachment	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

1. Ensure that the camshaft assembly is clean and free from wear or damage. If necessary, install the camshaft gear. Refer to Disassembly and Assembly, "Camshaft Gear.- Remove and Install".

2. Lubricate the camshaft assembly with clean engine oil prior to installation.

This is the sample of the sample click on
the download link for complete manual

DOWNLOAD LINK

For some reason if link does not work download this pdf and then click